DO'S AND DON'TS

DO keep fresh alkaline batteries in Teddy Ruxpin and Grubby, too.

DON'T take them in the bathtub with you.

DO keep cassettes and cassette player clean.

DON'T drop Teddy Ruxpin too hard.

DO give Teddy Ruxpin and his friends a lot of love and please **DO** have a wonderful time!!!

Is there a problem?

- Teddy Ruxpin Adventures Series cassettes play from right to left. To start an Adventure, be sure the cassette is inserted with the full spool on the right.
- If Teddy Ruxpin or Grubby look like their animated actions are slowing down or if they sound like they're sick, change the batteries. The four LR 14 alkaline batteries should last for hours before you have to change them.
- If there's no sound, check and make sure the volume wheel at the back of Teddy Ruxpin's neck is turned up.
- If Teddy Ruxpin's or Grubby's mouth or eyes don't move, check to see if there's something stuck near their mouth or eyes.
- If Teddy Ruxpin doesn't work at all, check the door of the cassette player to make sure it's closed good and tight and that the on/off wheel is "on" and adjusted properly. Then make sure the cassette is in the right way – try turning the cassette over.
- If Grubby doesn't work at all, check his animation cord to make sure it's connected to both outlets securely.
- If it looks like Teddy Ruxpin or Grubby is in real trouble, and none of the above suggestions help, read the Warranty statement.

WORLDS OF WONDER®

Worlds of Wonder, Inc. manufactures a high quality and innovative family of products which combines the latest animation technology with *good, wholesome* fun and adventure. We are committed to both excellence and the imaginative spirit of children everywhere.

Distributed by Mattel for Worlds of Wonder, Inc. © 1985 Alchemy II, Inc. "Patents Pending." All rights reserved. Worlds of Wonder, Inc. is the exclusive licensee, manufacturer and distributor of the World of Teddy Ruxpin Toys. Teddy Ruxpin and Teddy Ruxpin characters are trademarks of Alchemy II, Inc., Chatsworth, CA. The symbol W•W and "Worlds of Wonder" are trademarks of Worlds of Wonder, Inc., Fremont, California. Manufactured for Worlds of Wonder, Inc. Printed in Hong Kong.

THE WORLD OF TEDDY RUXPIN™

CARE AND INSTRUCTIONS

Distributed by MATTEL

WORLDS OF WONDER®

How does Teddy Ruxpin® DO that?!

We're really glad that this Teddy Ruxpin is now your special friend. To operate him, there are just a few simple steps to take.

1. Put in the batteries!

   Open Teddy's tunic and look at his back. Near the bottom there's a small door–open it and insert four alkaline LR 14 size batteries (non-alkaline batteries won't last as long). Please note which way the batteries go in (see photo). Close the door good and tight.

2. Put in the special Animation Cassette.

   Lift up the door in Teddy's back and insert an Adventure Series cassette as shown. Be sure that the full spool of tape is on the *right*, and the arrows point toward Teddy's head. Insert the thin, closed end of the cassette first, and then gently push the other end down.

3. Close the cassette door (do not force the door–it should close easily), and fasten Teddy Ruxpin's tunic at his sides.

4. Rotate the wheel near Teddy Ruxpin's neck to the right. This will start the cassette. Adjust the volume by rotating the wheel.

5. At the end of the story, just turn the cassette over and you'll get to hear the story and see Teddy Ruxpin talk again.

6. To change cassettes, turn the wheel to the left until it clicks off. Open the cassette door, remove the cassette and put in a new one. Turn Teddy Ruxpin back on.

   Teddy Ruxpin will turn himself off automatically at the end of the cassette.

7. If you play standard cassettes in Teddy Ruxpin, his eyes, nose and mouth may not move or be synchronized with the sound.

How does Grubby™ work?

We think it's great that you've brought Grubby home to share in all your adventures with Teddy Ruxpin. But first things first! We need to get Grubby all set up so that he can talk and sing along with you and Teddy!

1. Open the battery compartment and remove the animation cord.

2. Put in the alkaline batteries (see photo at right).

3. Plug one end of Grubby's animation cord into the outlet located next to Grubby's batteries (see photo).

4. Plug the other end of the cord into the outlet next to Teddy Ruxpin's batteries (see photo).

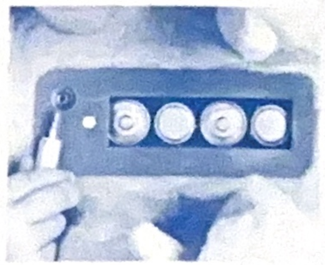

5. Grubby will now operate automatically whenever Teddy Ruxpin is operating.

NOTE:
No other connector cable will work with Grubby and Teddy Ruxpin.

How do the Fob® Hand Puppets work?

As you know, the Fobs are specially-made hand puppets. You can make the Fobs come to life with a special mechanism inside their beaks. It's easy even for little hands to make the Fobs talk! Just put your hand inside Fob's head and squeeze the special mechanism. Squeeze once to open Fob's beak, and release to close it. You can also wiggle his antenna by moving the ring inside his head back and forth. Make him talk, bend his head and even stre-e-e-etch his neck!

How to take good care of Teddy Ruxpin® and his friends

Teddy Ruxpin and his friends have been made to withstand years of cuddling and love, but there are a few things to keep in mind.

- ★ Give them a pleasant environment. Excessive heat or submersion in water can be hard on them.
- ★ Keep them clean. Remove dirt with a soft cloth dampened with a mild soap, rinse and dry with a soft cloth.
- ★ Please don't poke at them with sharp objects, like pencils or scissors–OUCH! Fingers only, please!
- ★ Please be careful when disconnecting Grubby's Animation Cord. The cord provides important animation and sound signals and should not be pulled or used as a handle.
- ★ Since all the sound and the animation program that make Teddy Ruxpin and Grubby come to life are on the special animation cassette, please try to keep the cassette and the cassette player as clean as possible. Keep the cassettes in a dry, cool place. It's a good idea to clean the cassette player with a cassette head cleaner every 20 or so hours.
- ★ If you're not going to play with Teddy Ruxpin or Grubby for awhile (more than two weeks), it's a good idea to take out their batteries.